

## SCUBAPRO Balanced Power Inflator Trouble Shooting Guide

Symptom	Symptom Correction		
Continuous leak from inflator (continuous BC inflation)	Replace inflator seat or stem o'rings	High IP – See first stage trouble shooting guide	Tools Needed Various
External leaks from exhaust or inflator buttons	Replace and/or lubricate in Replace e	flator or exhaust stem o'ring. exhaust seat	Various
*			